

Milan Touchscreen User Manual

Please take the time to read and understand this user manual.
Be sure to keep this manual in a safe place for future reference.



FOR YOUR SAFETY




1. Always connect all cables securely before switching on the power.
2. Do not operate the touchscreen if the power supply or plug is damaged.
3. If the display is damaged or has been exposed to water, safely disconnect power to the sofa and contact our Customer Care team.
4. Do not insert or place anything into the exposed openings of the sofa or touchscreen.
5. This touchscreen is for indoor use only. Avoid high temperatures and direct sunlight.
6. Safely disconnect the power before cleaning. Use a microfibre cloth to wipe the surface.
7. Children should only use this touchscreen when under adult supervision.
8. If any faults occur, please contact Customer Care for assistance. Do not disassemble or attempt to repair the touchscreen yourself.
9. This product is non-recyclable. Do not bury or incinerate.

Touchscreen specifications

Power input	DC-20V-4.5A 29V 2A
Audio output	9W*4 25W

Using the touchscreen

Icon	Button	Function
	Seat recline	Press to open the seat, release to stop.
	Seat retract	Press to retract the seat, release to stop.
	Headrest open	Press to open the headrest, release to stop.
	Headrest retract	Press to retract the headrest, release to stop.
	Lumbar open	Press to adjust the lumbar support, release to stop.
	Lumbar retract	Press to retract the lumbar support, release to stop.
	Home	Press to reset recliner functions, release to stop.
	Heated seats (low)	Press for low-level seat heating, press again to turn off.
	Heated seats (high)	Press for high-level seat heating, press again to turn off.
	Power	Short press to turn off screen, long press for 10 seconds to restart.
	Bluetooth	Press for Bluetooth pairing. Flashes for 30 seconds while searching, turns blue when connected. Long press to disconnect Bluetooth.
	Table	Press once to open the console table, press again to stop. Press again to retract the table, press again to stop.

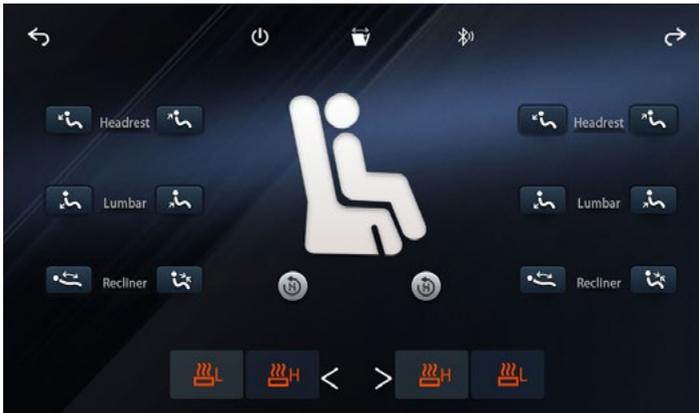

Speaker controls

Connecting to Bluetooth


Short press the  button to initiate Bluetooth pairing. On your external device, open Bluetooth settings and connect to 'SofaScreen02A'. Once connected you will then be able to play your media. If you wish to connect another smart sofa device, follow the same steps but also connect to the second smart sofa device 'SofaScreen02B'.

Icon	Button	Function
	Previous track	Short press to switch to the previous track.
	Next track	Short press to switch to the next track.
	Pause/Play	Short press to pause, short press again to resume playback.
	Volume down	Short press to decrease volume by one level, long press for continuous decrease.
	Volume up	Short press to increase volume by one level, long press for continuous increase.
	Bluetooth sync	Short press to enter sync mode, short press to exit sync mode.
	Treble adjustment	Tap the treble button to display an adjustable bar (level 0-16).
	Bass adjustment	Tap the bass button to display an adjustable bar (level 0-16).
	Vibration adjustment	Press once for level 1, press again for level 2, press again to turn off.



System settings

Icon	Button	Function
	Brightness adjustment	Drag the slider to adjust brightness.
	Eye protection mode	Short press to enable, short press again to disable.
	Screen sleep timer	Choose 30 seconds, 60 seconds or 120 seconds. The default is 30 seconds.
	Background selection	Select a colour for your screen background.

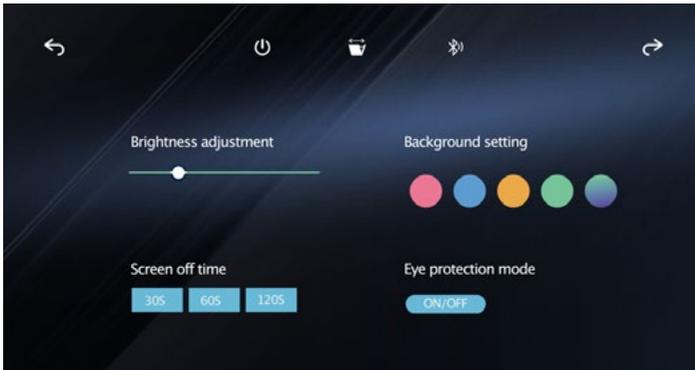

Troubleshooting

Fault	Possible cause and solution	Fault	Possible cause and solution
Power on failure	<p>Power is not connected.</p> <p>The power cable is disconnected or the plug is not properly inserted.</p> <p>The connected socket is faulty.</p>	Touchscreen not responding	<p>Device interference. Move the interference source away.</p> <p>Touchscreen only works with one screen press at a time. Ensure only one button on the screen is being pressed.</p> <p>Restart the device after cutting off power for 15 seconds.</p>
Bluetooth connection failure	<p>Another Bluetooth device is connected. Long press the Bluetooth button to disconnect the current Bluetooth connection, then try again.</p> <p>Ensure you are connecting to "SofaScreen02A" on your device.</p> <p>The Bluetooth connection is beyond the limited range. Do not exceed 6 meters in distance for Bluetooth connection.</p> <p>Avoid connecting through obstacles or from corners.</p>		<p>Unreasonable operation caused the device to freeze. Restart the device after turning off the power for 15 seconds.</p> <p>Loose connection. Check all connections and reconnect.</p> <p>Device malfunction. Please contact Customer Care.</p>
No sound	<p>The playback is in pause mode. Press (⏮) to resume music.</p> <p>The speaker extension cable is disconnected. Check all wiring or reconnect.</p>	Seat adjustment ineffective	<p>Loose connection. Check all connections and reconnect. If the problem persists, please contact Customer Care.</p>