 


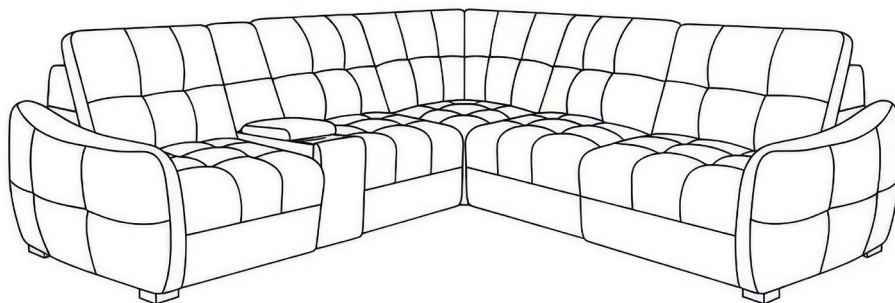

Please take the time to read and understand this user manual. Be sure to keep this manual in a safe place for future reference.

Please note: If you need to disassemble and reassemble the sofa, the smart console table with audio panel can only be positioned on the left-hand side of the sofa, next to the left arm seat unit.

FOR YOUR SAFETY

- Always connect all cables securely before switching on the power.
- Do not operate the control panel if the power supply or plug is damaged.
- If the control panel is damaged or has been exposed to water, safely disconnect power to the sofa and contact our Customer Care team.
- Keep USB ports dry and keep liquids well away. Safely disconnect power to the sofa and use only after fully dried. If the USB port stops working, please contact our Customer Care team.
- Do not insert or place anything into the exposed openings of the sofa or control panel.
- Safely disconnect the power before cleaning. Use a microfibre cloth to wipe surfaces.
- Do not allow children to play with motion furniture or operate moving parts unattended. Users should always operate with care for themselves and others.
- Before moving the sofa, disconnect the power supply and disconnect audio component connection wires to avoid damage.
- If any faults occur, please contact Customer Care for assistance. Do not disassemble or attempt to repair the touchscreen yourself.
- This product is non-recyclable. Do not bury or incinerate.

Connecting the remote control

1. Ensure the sofa is plugged into the wall and powered on. The sofa will make a noise indicating that it is powered on.
2. Pair the remote with the sofa module following the steps below, starting with the left-hand facing side of the sofa.
3. Repeat the steps for each sofa module to complete full pairing.


Simultaneous
long press



The indicator will
start blinking



The sofa will make a
confirmation sound

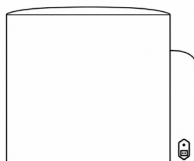


A solid light indicates a
successful pairing




Using your recliner

1. Before using the recliner, ensure you're sitting fully in the seat.
2. The Alvera features retract and recline buttons, shown below. Heated seat options also come with an additional button to activate/deactivate the heated seats

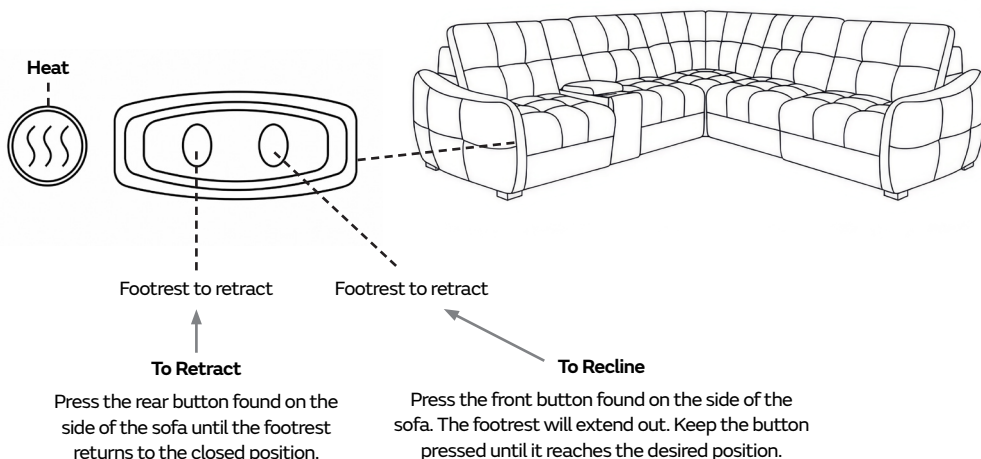

Using the control panel

The control panel is located in the storage compartment of the console table. Simply lift the lid of the storage compartment to access the panel.

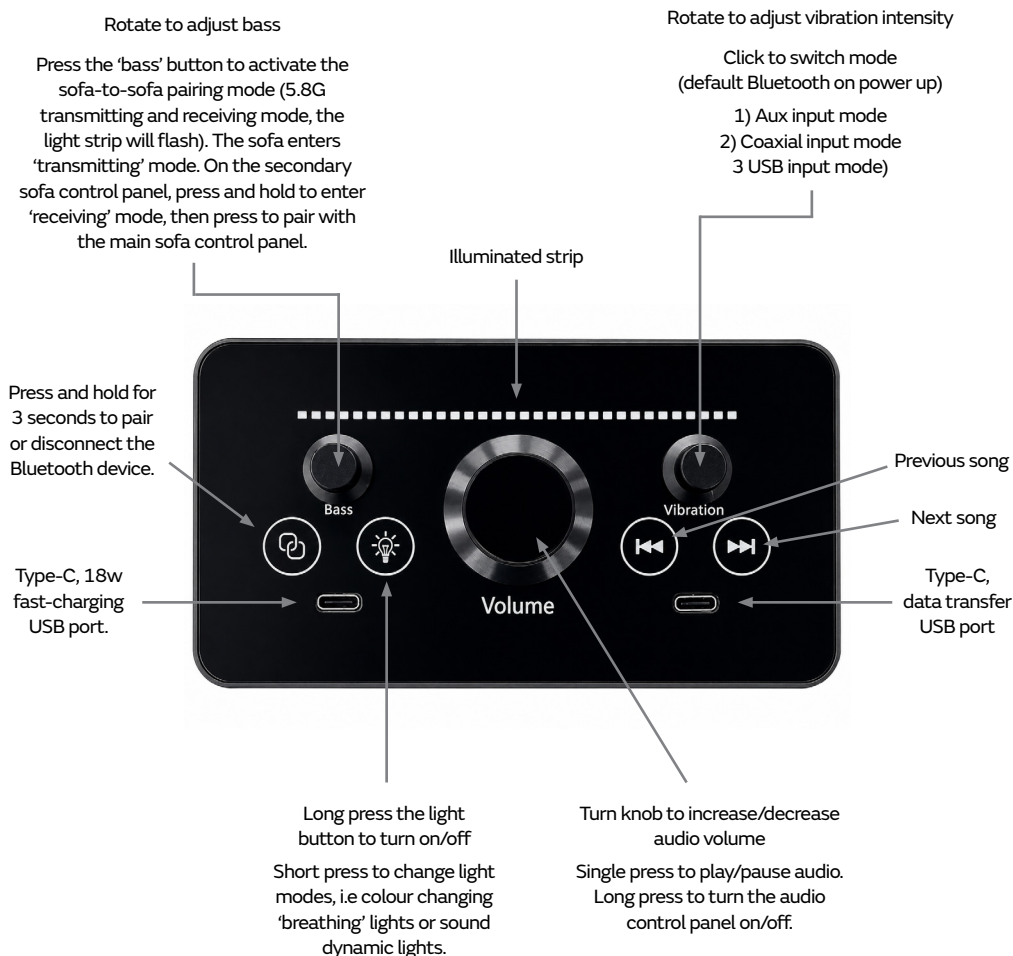

Connecting to Bluetooth

1. Ensure the sofa is powered on.
2. Ensure Bluetooth is enabled on the device you wish to connect to the sofa. Press and hold the  button on the audio control panel for 3 seconds to activate Bluetooth.
3. On the device you wish to connect, look for 'Immersive audio' in the list of Bluetooth devices, and select it to pair.
4. When you hear the sofa say 'Immersive audio', the connection is complete.
5. If you wish to connect a new device to the sofa, long press the  button to disconnect your current device, then follow the above instructions to connect a new device.

Connecting two sofas via Bluetooth

1. If you have purchased two Alvera sofas equipped with audio control panels, choose one sofa as your "main unit" and the other as your "secondary unit". To connect both sofa audio systems together, initiate pairing mode by short pressing the "Bass" knob on the main unit's control panel.
2. The light strip on the main unit will then flash yellow, indicating the sofa is ready to pair. On the secondary unit, long press the "Bass" knob for 3 seconds until you hear "Audio reception", then short press the knob to enter pairing mode.
3. The light strip on the secondary unit will then flash yellow, indicating it is in pairing mode. Pairing should complete within 10 seconds if done correctly. A long "beep" will sound, confirming successful sofa pairing.
4. To unpair the sofas, press and hold the "Bass" knob on the secondary unit for 3 seconds. You should hear "Audio transmission", which confirms the sofas are disconnected; the secondary unit will then work independently.
5. If the sofas have been accidentally disconnected, press and hold the "Bass" knob on the secondary unit for 3 seconds until you hear "Audio reception". The yellow indicator light will confirm successful reconnection.

Troubleshooting

Fault	Possible cause and solution
Power on failure	Check the power cable is fully connected, check whether the power supply is faulty, and check if the power socket is working. Check whether each accessible cable is connected correctly and making full contact.
Bluetooth connection failure	Check you aren't already connected to another Bluetooth device. Please press and hold the  button for 3 seconds to disconnect the current connection, and then to connect your device. The device must be within the effective range. The distance between the device and the console table should not exceed 8 meters. Do not attempt to connect through obstacles. Check your device is not connected to a different Bluetooth device. If so, unpair then attempt to pair with the control panel.
No sound	Playback may have been paused. Attempt to resume your audio track. Check all accessible connections and reconnect where necessary.
Recliner doesn't move	Depending on the age of the recliner, problems like aging and motor burn out may occur. Check whether the buttons on the recliner controls are damaged, or whether any accessible cables are loose or have poor contact. Potential issue with the recliner controls. Please contact Customer Care. Do not attempt to repair yourself.