

# The Sullivan

Please check you have the correct fittings and read through before commencing with assembly.



---

## Supplied Fittings:

A x1



B x5



C x5



D x32




E x14



F x6




## Step 1

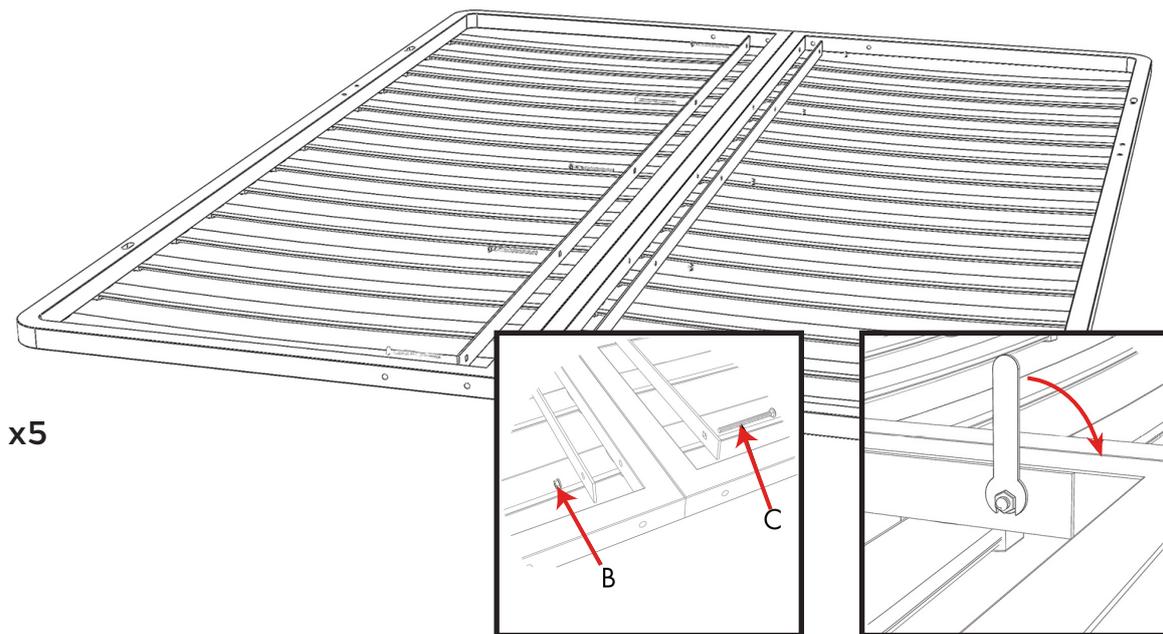


Place the 2 frames together and put the two flat bars on each side. Slot bolt (C) through, starting with the flat bar that has square holes. Use a flanged nut (B) and tighten up using the spanner provided.

## Step 2

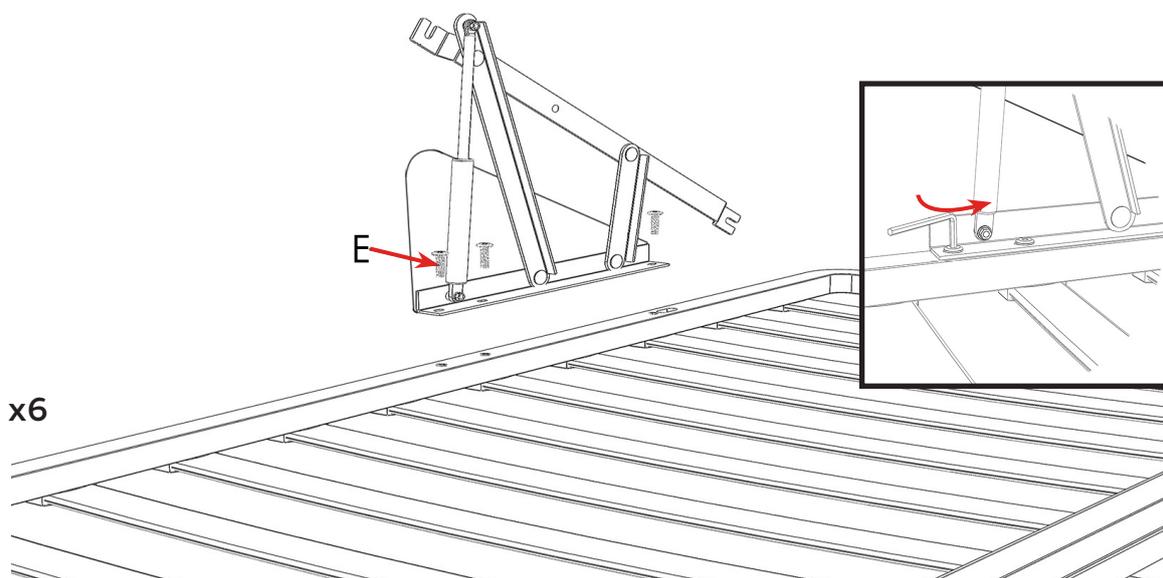


Using bolts (E) attach the safety guards and lifting arms to the underside of the slatted base. The bolts will slot through the top of the arm bracket and into the gold threaded nut inside the slatted base. Tighten using the allen key provided.

### Step 3

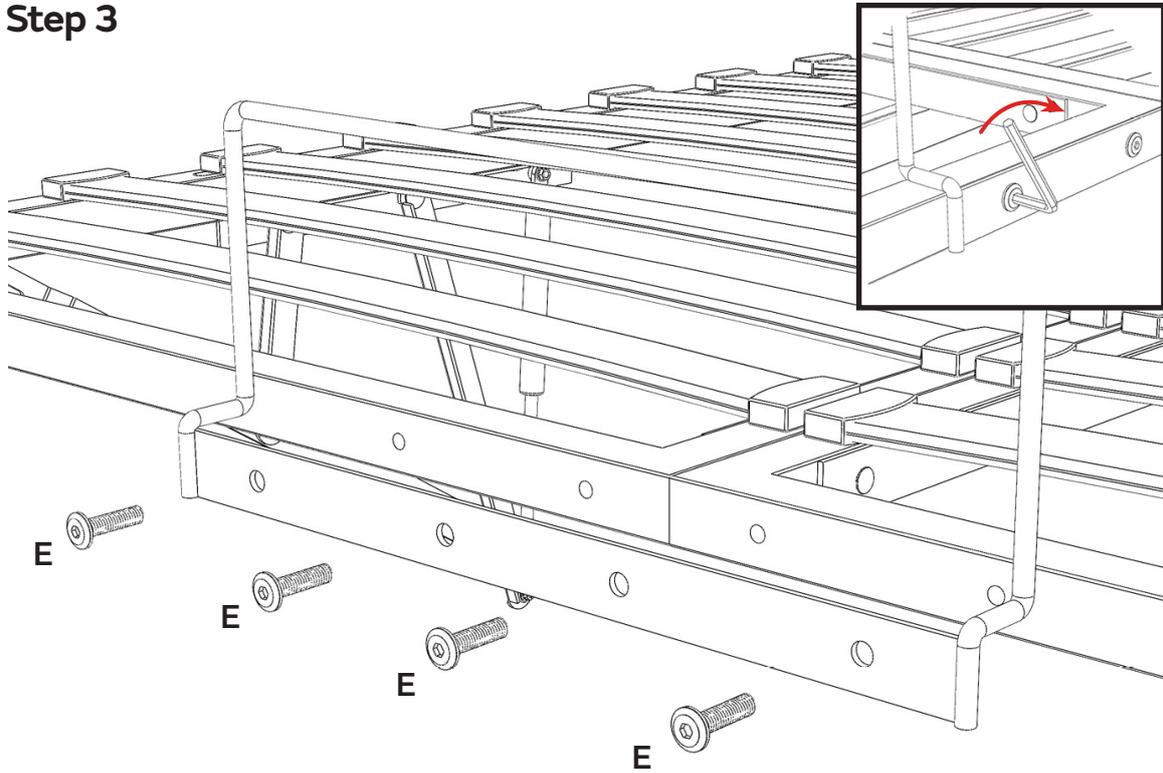


Attach the mattress stop at the top end of the headboard using 4x bolt (E).

### Step 4

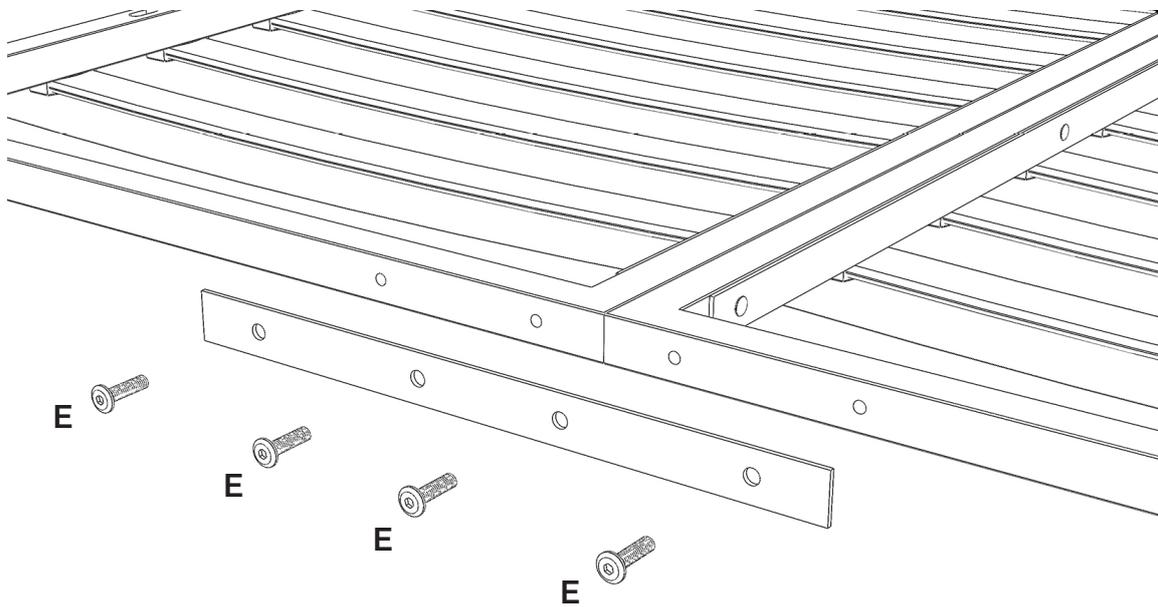


Attach the strengthening bar at the bottom end of the headboard using 4x bolt (E).

## Step 5

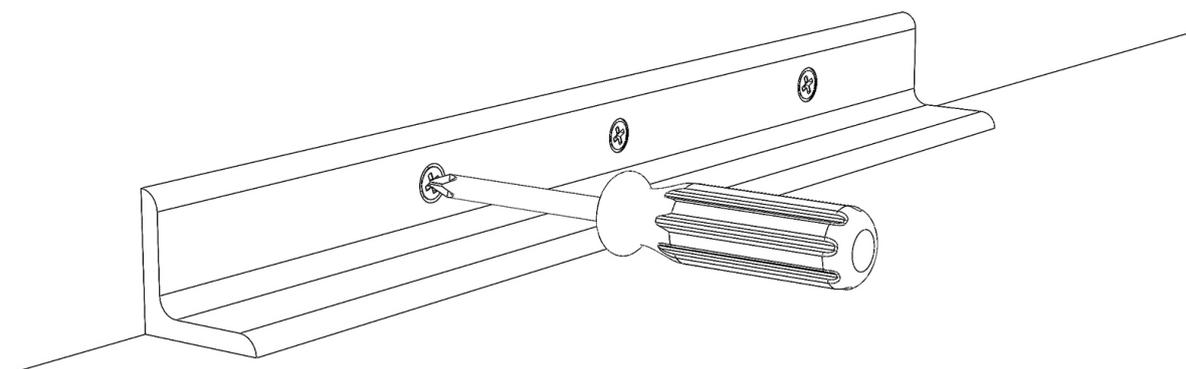

Fit the right-angled brackets to the side rails, using screws (F).


## Step 6

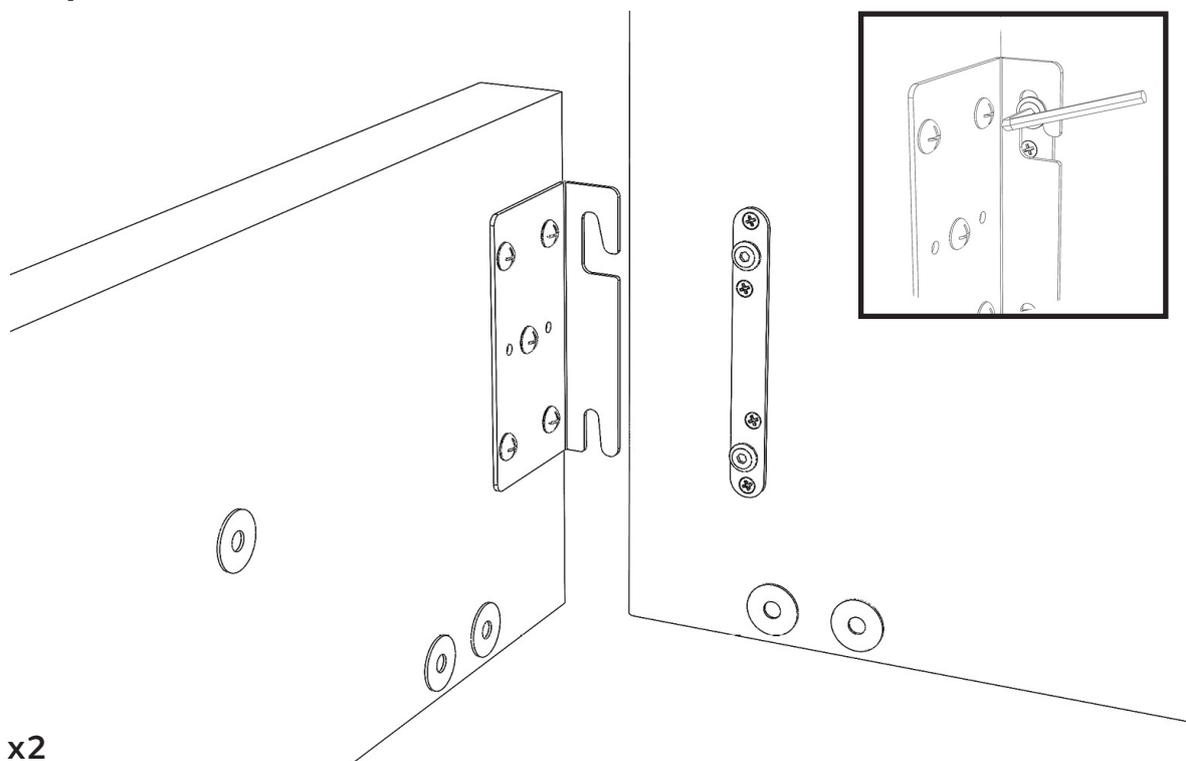

x2


Slot the side rail on the bolts on the headboard. Secure using the allen key provided. Repeat for the other side rail.

## Step 7

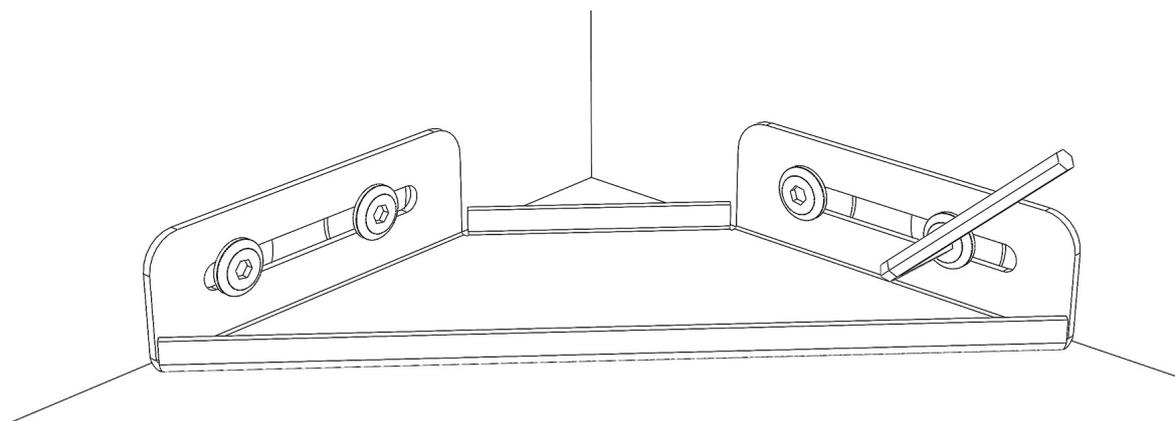


Fit the headboard corner brackets (2x) using 4x bolts (D) for each bracket.  
Tighten using the allen key provided.

## Step 8

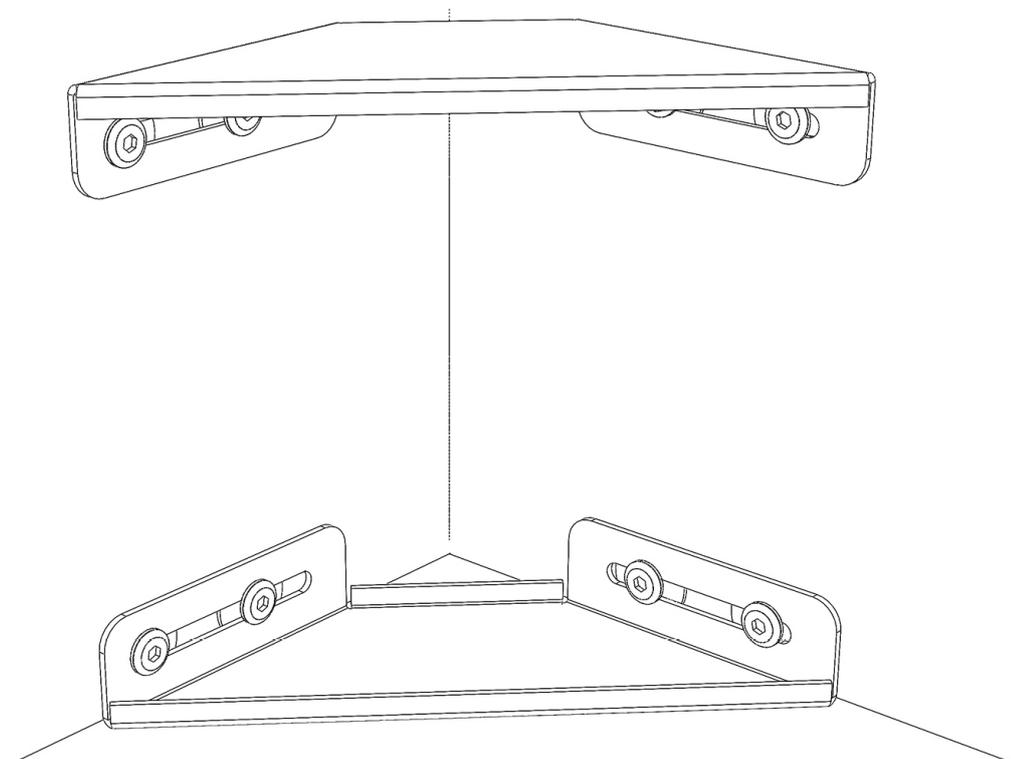


Fit the foot end corner brackets (4x) using 4x bolts (D) for each bracket.  
Tighten using the allen key provided.

## Step 9

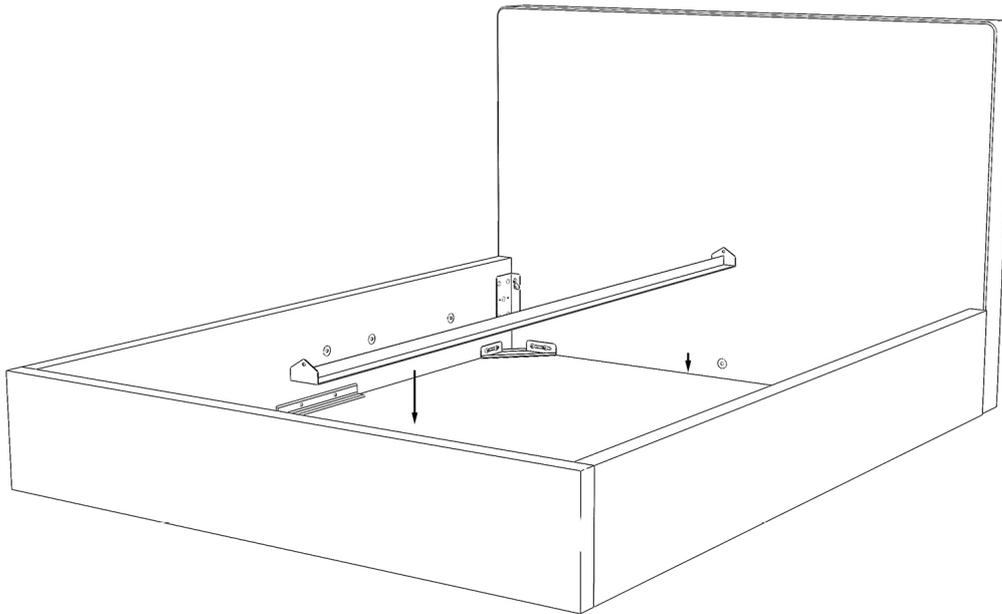


Position the centre rail and secure to the headboard and foot end with bolts (D).

## Step 10

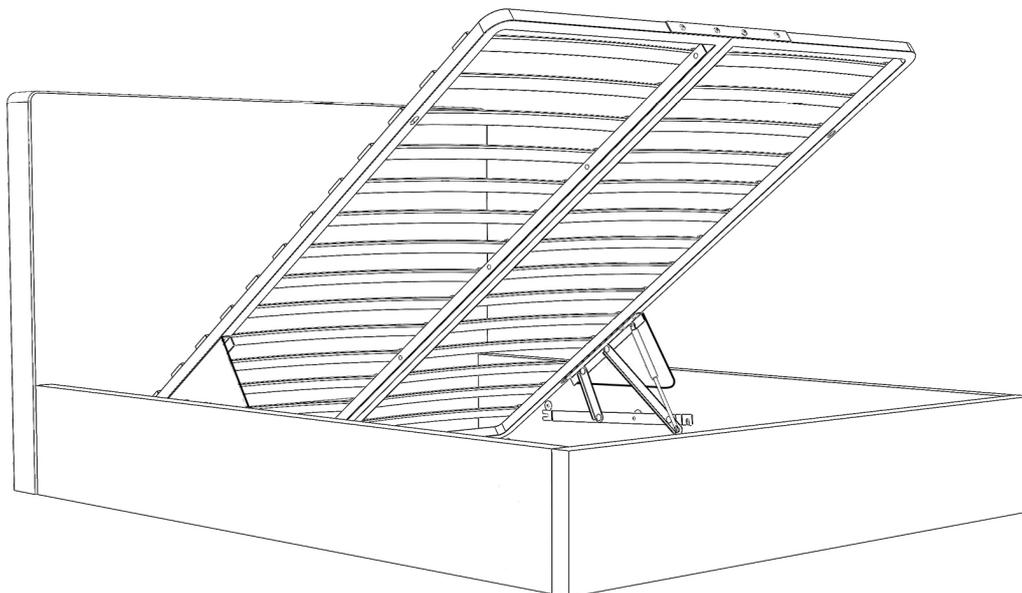


**THIS IS A TWO PERSON OPERATION.** Lift the metal frame into the bed, rest the headboard on the centre rail, fitted in step 9. Angle the whole frame as shown so that the bolt holes line up in preparation for step 11.

## Step 11

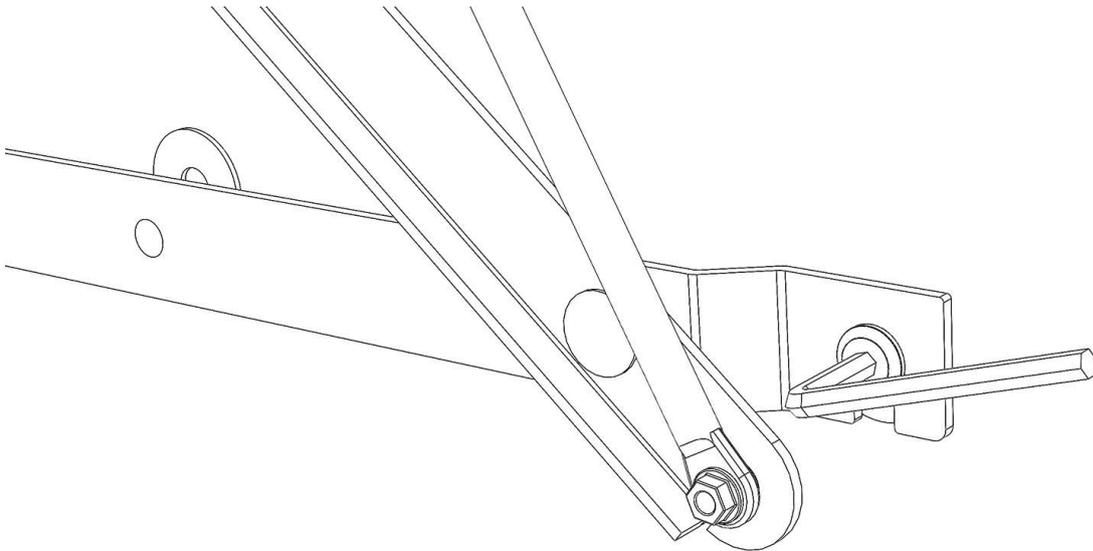


THIS IS A TWO PERSON OPERATION. Loosely fit 1x bolt (D) into the first hole (furthest away from the head end) in each side rail. Hook the end of both lifting arms onto these bolts and tighten.

## Step 12

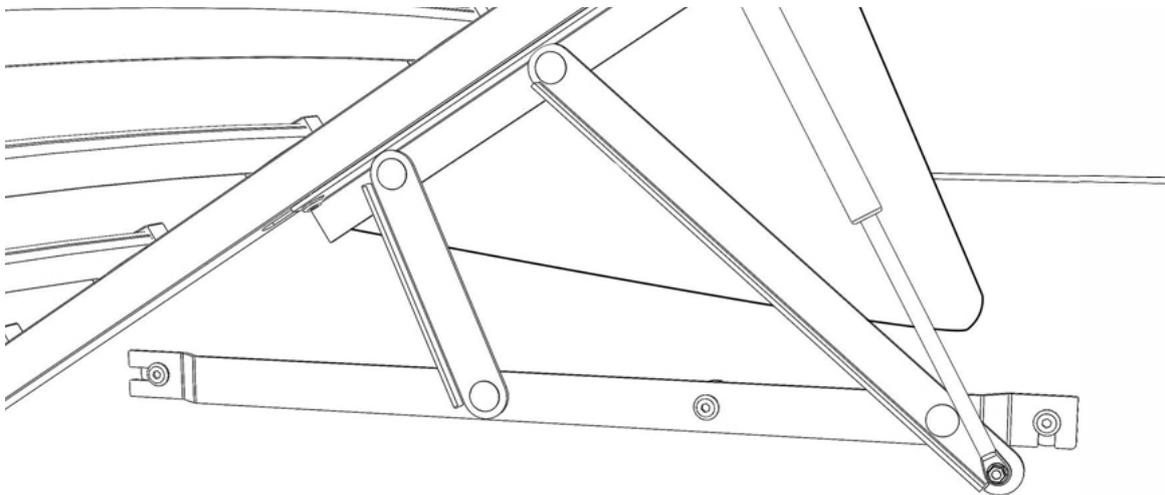


THIS IS A TWO PERSON OPERATION. Tip the metal frame so that the rest of the holes in the lifting arm, line up with the holes in the side rails. Fix in place using 2x bolts (D) per side and tighten all bolts using allen key provided.

### Step 13

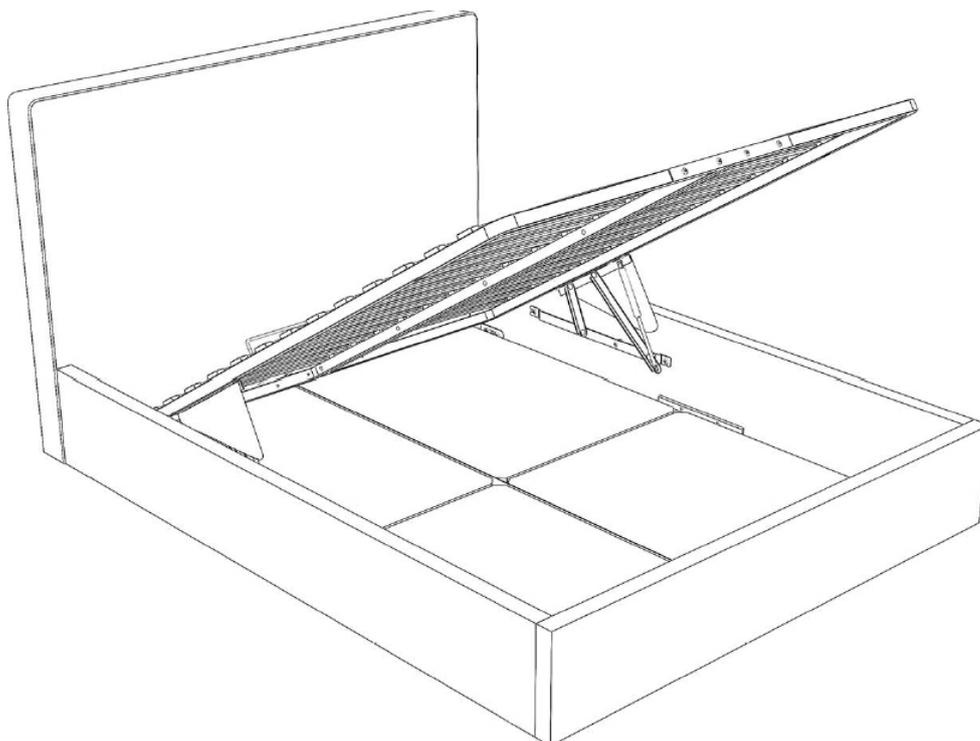

Slide the headboard panels into position followed by the foot end panels.

### Step 14

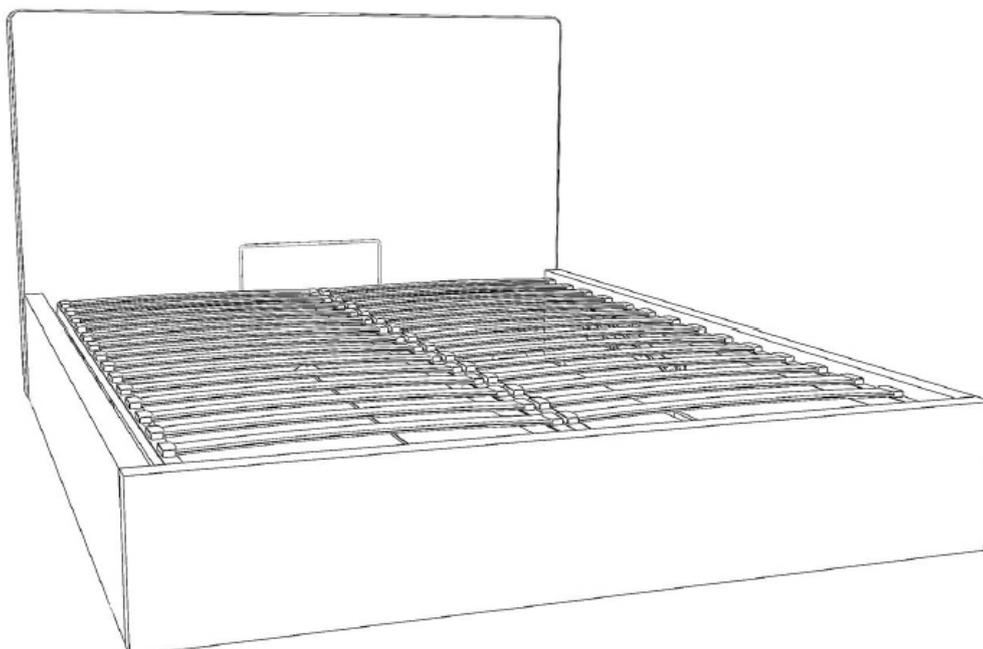

Lift the metal frame up from the foot end to access the storage section.